

## A 200 p (EU version) – Operating instructions on how to disable the volume limit

The portable A 200 p headphone amplifier (EU version, Order # 716.707) is provided with a volume limit to protect the hearing according to the DIN EN 50332-2 standard, which becomes only effective when using an iPhone/iPad/iPod or smartphone. This volume limit can be disabled or enabled at the user's own responsibility.


I know that listening at higher volume levels can cause irreversible damage to the hearing. Due to the high output power of the A 200 p this can happen after a very short period of time when the volume limit is disabled.



By clicking on the tick box I confirm that I disable the volume limit at my own responsibility and that I will select a volume level that will not harm my health.

**Note:** Please download this file onto your computer. The operating instructions on how to disable the volume limit can be read when clicking on the tick box!

### Controls and indicators

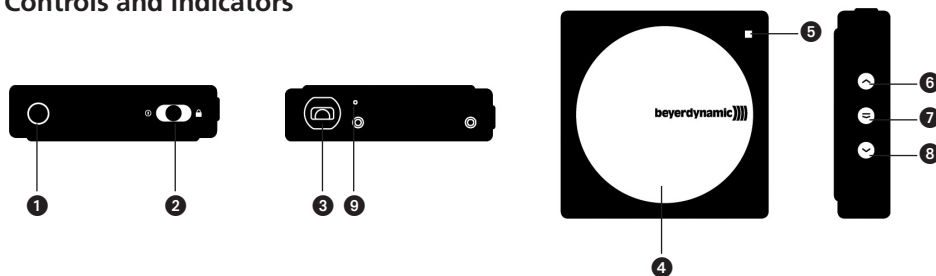

- 1 Headphone connection
- 2 On-off switch / lock
- 3 USB connection
- 4 Volume control
- 5 Status LED
- 6 Previous title
- 7 Start/Pause
- 8 Next title
- 9 Charging LED

### How to disable the volume limit

In order to disable the volume limit of the A 200 p, it is necessary to follow the sequence 1. to 6.

1. At first disconnect the cables from the headphone connection 1 and the USB connection 3.
2. Then slide the on-off switch 2 to the left to turn on the device. The status LED 5 will flash blue.
3. Afterwards slide the on-off switch 2 to the right to the lock icon. The switch will lock in place.
4. Then press the middle start/pause button 7 for about 5 seconds, until the status LED 5 will briefly illuminate violet and afterwards red. The volume limit is now disabled.
5. Slide the on-off switch 2 to the very left and hold it for about 2 seconds to turn off the A 200 p. The status LED 5 will go out.
6. Connect the cables to the headphone connection 1 and the USB connection 3 again and turn on the A 200 p (refer to item 2.).
7. Now you can select the requested volume with the volume control 4 beyond the volume limit.

### How to enable the volume limit

If you would like to enable the volume limit again, please proceed as described in the above sequence 1. to 6.

When performing item 4., the status LED 5 will briefly illuminate violet and afterwards blue. The volume limit is now enabled again.